



Atrust t66 Thin Client

Quick Start Guide

Thank you for purchasing Atrust thin client solution.

Read this Quick Start Guide to set up your t66 and access Microsoft, Citrix, or VMware desktop virtualization services quickly.

 
For more information, please refer to the User's Manual for t66.

**NOTE:** Your warranty will be *voided* if the warranty seal on the product is broken or removed.



Sample Barcode

1 Power Button and I/O Ports

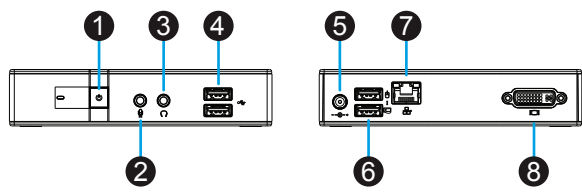

No.	Component	Description
1	Power button	Press to power on the thin client. Press to wake up the thin client from <b>System Sleep mode</b> (see Topic 4 for <b>Suspend</b> feature). Long press to <b>force power off</b> the thin client.
2	Microphone port	Connects to a microphone.
3	Headphone port	Connects to a set of headphones or a speaker system.
4	USB port	Connects to a USB device.
5	DC IN	Connects to an AC adapter.
6	USB port	Connects to a mouse or keyboard.
7	LAN port	Connects to your local area network.
8	DVI-I port	Connects to a monitor.

2 Assembling the AC Adapter

To assemble the AC adapter for your t66, please do the following:

1. Unpack your thin client package and take out the AC adapter and its detached plug.
2. Slide the plug into the AC adapter until it clicks into place.

 
**NOTE:** The supplied plug may vary with your area.



3 Getting Connected

To make connections for your t66, please do the following:

1. Connect USB ports 6 to a keyboard and mouse separately.
2. Connect the LAN port 7 to your local network with an Ethernet cable.
3. Connect the DVI-I port 8 to a monitor, and then turn the monitor on. If only the VGA monitor is available, use the supplied **DVI-I to VGA adapter**.

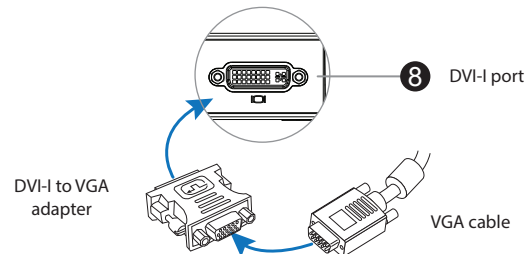

4. Connect the DC IN 5 to a power outlet using the AC adapter supplied.

4 Getting Started

To start using your t66, please do the following:

1. Ensure that your **monitor is connected and turned on**.  
**NOTE:** Please note that you need to connect and turn on your monitor **before** powering up the thin client. Otherwise, the client may have no monitor output or fail to set an appropriate resolution.
2. **Press the Power button** to turn on the client. Wait a moment for **Atrust Quick Connection screen** to appear.
3. Go to 5 to set the time zone for the **first time** use.  
If the time zone had been set:  
(a) Go to 7 for accessing Microsoft Remote Desktop services.  
(b) Go to 8 for accessing Citrix services.  
(c) Go to 9 for accessing VMware View or Horizon View services.

Atrust Quick Connection Screen




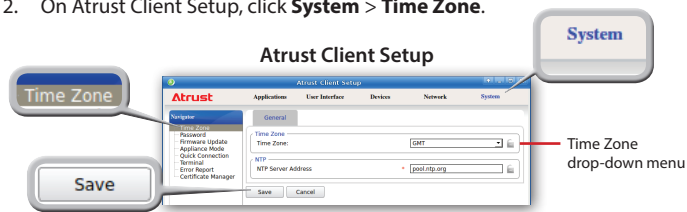 
Power Off	Click the icon to <b>suspend, shut down, or restart</b> the system.
Local Desktop	Click the icon to enter the local Linux desktop. To return to this screen from the local Linux desktop, see 6.
Setup	Click the icon to launch Atrust Client Setup.
Mixer	Click the icon to configure audio settings.
Network	Indicates the network type (wired or wireless) and status. Click the icon to configure network settings.



## Configuring the Time Zone

To set the time zone for your t66, please do the following:

1. Click the **Setup**  icon to launch Atrust Client Setup.
2. On Atrust Client Setup, click **System** > **Time Zone**.



3. Click the **Time Zone drop-down menu** to select the desired time zone.
4. Click **Save** to apply, and then close Atrust Client Setup.




## Returning to the Quick Connection Screen

 
To return to **Atrust Quick Connection screen** when on local Linux desktop, please double click **Atrust Quick Connection** on that desktop.




## Accessing Microsoft Remote Desktop Services

To access Microsoft Remote Desktop services, please do the following:

1. Click **Remote Desktop**  on Atrust Quick Connection screen.
2. On the appeared window, type in the computer name or IP address of the computer, user name, password, and domain (if any), and then click **Connect**.

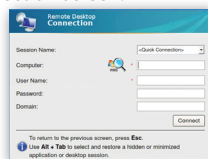

**NOTE:** To discover available MultiPoint Server systems over your network, click , select the desired system, and then click **OK**. Type in data manually if the desired system cannot be found.

**NOTE:** To return to **Atrust Quick Connection screen**, press **Esc**.


3. The remote desktop will be displayed on the screen.



## Accessing Citrix Services

 
### Connecting to the Server

To connect to the server through which virtual desktops and applications are accessible, please do the following:

1. Click **Citrix**  on Atrust Quick Connection screen.
2. On the appeared **Atrust Citrix Connection screen**, enter the appropriate IP address / URL / FQDN of the server, and then click **Log On**.

**NOTE:** FQDN is the acronym of Fully Qualified Domain Name.


### Atrust Citrix Connection Screen

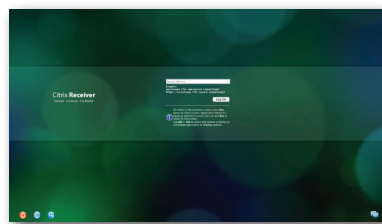

**NOTE:** To return to **Atrust Quick Connection screen**, press **Esc**.

### Logging On to Citrix Services

When connected, the **Citrix Logon screen** appears. The appeared screen *may vary with* the service type and version.

**NOTE:** A message “This Connection is Untrusted” might appear. Consult the IT administrator for details and ensure the connection is secure **first**. To import a certificate, click **Setup**  > **System** > **Certificate Manager** > **Add**. To bypass, click **I Understand the Risks** > **Add Exception** > **Confirm Security Exception**.

The following is an example of Citrix Logon screens.

### Citrix Logon Screen

Type the required user name, password, domain, and click **Log On** to access virtual desktops or applications.



This area will display **Citrix XenDesktop** or **Citrix XenApp**, depending on your Citrix service type.

**NOTE:** To return to **Atrust Citrix Connection screen**, press **Esc**.


**NOTE:** On **Desktop Selection** or **Application selection screen**, you can

- Use **Alt + Tab** to select and restore a hidden or minimized application.
- Click **Log off** on the top of the screen to return to **Citrix Logon screen**.
- Press **Esc** to return to **Atrust Citrix Connection screen** directly.

 



## Accessing VMware View Services

To access VMware View or Horizon View services, please do the following:


1. Click **VMware View**  on Atrust Quick Connection screen.
2. On the opened window, double-click **Add Server** icon or click **New Server** in the top-left corner. A window appears prompting for the name or IP address of the VMware View Connection Server.
3. Enter the required information, and then click **Connect**.

**NOTE:** To return to **Atrust Quick Connection screen**, close the opened windows.

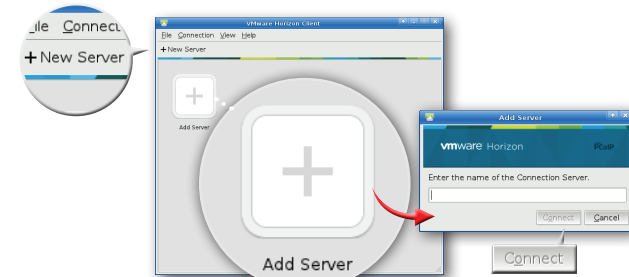

**NOTE:** A window might appear with a certificate message about the remote server. Consult the IT administrator for details and ensure the connection is secure **first**. To import a certificate through a USB flash drive or a remote server, on Atrust Quick Connection screen, click **Setup**  > **System** > **Certificate Manager** > **Add**. To bypass, click **Connect Insecurely**.

 4. A Welcome window might appear. Click **OK** to continue.
5. A window appears prompting for the credentials. Enter your user name, password, click the Domain drop-down menu to select the domain, and then click **OK**.

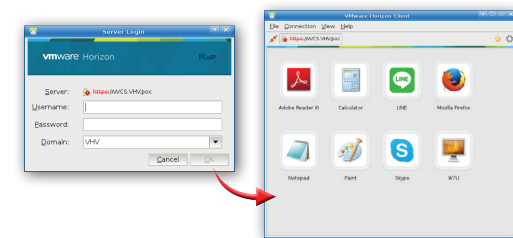

6. A window appears with available desktops or applications for the provided credentials. Double click to select the desired desktop or application.
7. The virtual desktop or application will be displayed on the screen.