Atrust
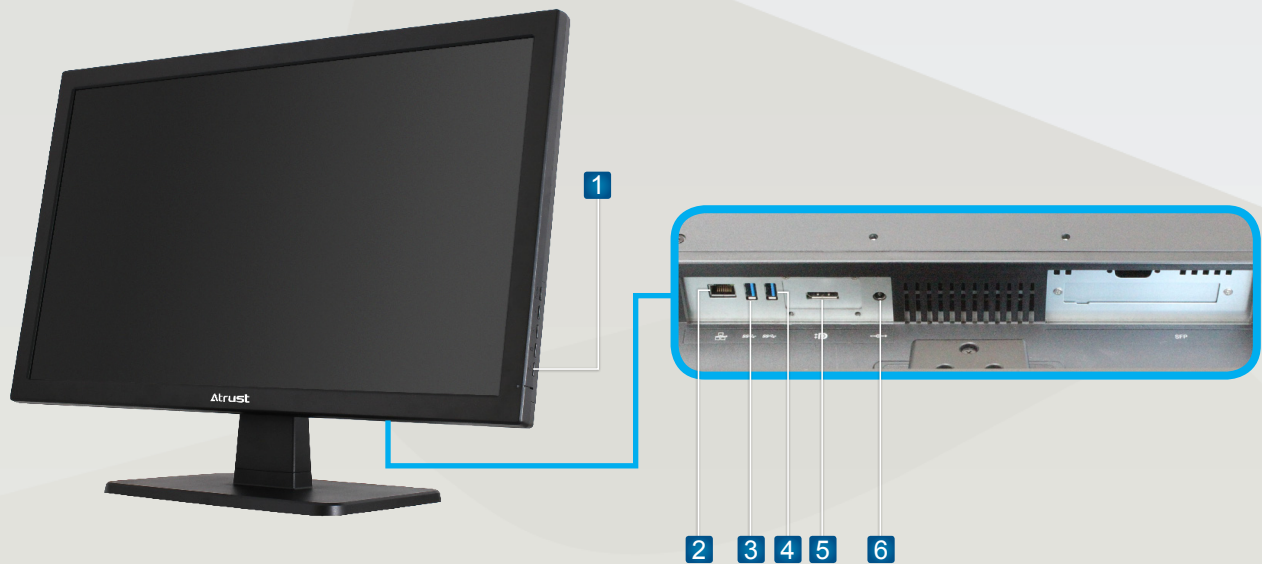
Atrust All-in-One- A210L

1 **Power Button**
* Press to :
a) Turn on the system.
b) Resume from the suspend mode.
* Long press to *power off* the system.

2 **LAN Port**
It connects to a host server through a LAN switch.

3 **USB 3.2 Gen 1 Port**
It connects to USB device.

4 **USB 3.2 Gen 1 Port**
It connects to USB device.

5 **DisplayPort**
It connects to a monitor.

6 **DC IN**
It connects to an AC adaptor.

7 **Microphone Port**
It connects to a microphone.

8 **Headphone Port**
It connects to a headphone or a speaker system.

9 **USB 2.0 Port x 2**
It connects to USB devices.

10 **USB 2.0 Port x 2**
It connects to USB devices.

Atrust All-in-One - A210L

System	
Processor	Intel® Braswell Quad Core X5-E8000 1.04G (Burst to 2.0G)

Memory	
System memory	2GB (Manufacturing option: 4GB)
Flash memory	8GB

Display	
LCD Type/Resolution	23.6" LED Backlight / Up to 1920 x 1080

I/O Interfaces	
I/O ports	1 x DisplayPort, 2 x USB 3.2 Gen 1, 4 x USB 2.0, 1 x Audio out, 1 x Microphone port, 1 x Kensington lock slot, 1 x RJ-45, 1 x DC IN

Networking	
Ethernet	10M/100M/1000Mb

Dimensions / Weight	
Dimensions	(W) 569.6 x (D) 183.5 x (H) 412.3 mm (with stand)
Weight	4.65 kg (approximate)

Environment	
Cooling	Fanless
Operating noise	No noise
Operating temperature	0℃ ~ 35℃
Non-operating temperature	-20℃ ~ 60℃
Operating humidity (Rh)	10% ~ 90% (non-condensing)
Non-operating humidity (Rh)	5% ~ 90% (non-condensing)

AC Adaptor	
Operating voltage range	100 ~ 240 VAC
Rated line frequency	50 ~ 60 Hz
AC Adaptor	19V, 65W, 3.42A

Software	
Operating system	Atrust Linux
Management	Atrust Device Manager (ADM) / Atrust Client Setup (ACS)
Protocols	Citrix® ICA/HDX™, Microsoft® RDP™ with RemoteFX™, VMware® Horizon View™
Options	WiFi : IEEE802.11 a/b/g/n/ac Internal Speaker Adjustable display stand TPM